


# TECHNICAL INFORMATION AND SERVICE DATA

**RADIOLA**

**Model 566-MA**

FIVE VALVE, TWO BAND, A.C. OPERATED  
SUPERHETERODYNE

ISSUED BY:  
AMALGAMATED WIRELESS (AUSTRALASIA) LTD.

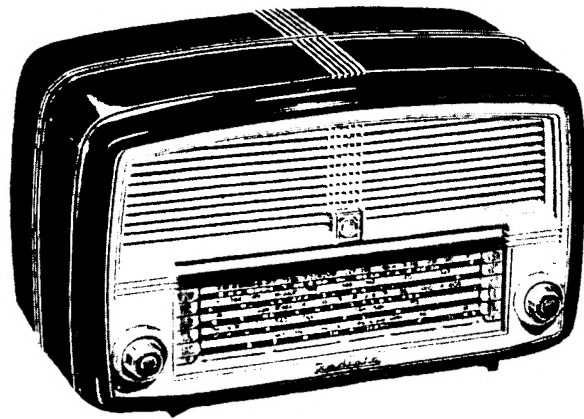

## ELECTRICAL SPECIFICATIONS

### Frequency Range: -

Medium Wave ..... 540-1600 Kc/s  
(555-187.5 Metres)

Short Wave ..... 6-18 Mc/s  
(50-16 Metres)

Intermediate Frequency ..... 455 Kc/s

Power Supply Rating ..... 200-260 volts  
50-60 C.P.S.

(Models are produced with other voltage and frequency ratings..)

Power Consumption ..... 40 watts

Dial Lamps ..... 6.3 volts, 0.25 Amp. W.E.S.

### Loudspeaker:

7 inch x 5 inch permanent magnet  
Part No. 20920.  
Transformer — XA2.  
V.C. Impedance — 3 ohms at 400 C.P.S.

### Connection to Power Supply:

The receiver should not be connected to any circuit supplying other than alternating current from 200-260 volts and at the frequency stated on the label within the cabinet.

The power supply connections are shown in the accompanying diagram.

### Valve Complement:

- (1) 6AE8 — Converter
- (2) 6BA6 — I.F. Amplifier
- (3) 6BA6 — I.F. Amplifier
- (4) 6BV7 — Detector, A.F. Amplifier, A.V.C., Output
- (5) 6X4 — Rectifier

Undistorted Power Output: 1.5 watts.



### Chassis Removal:

- (1) Remove the knobs by pulling them straight off their spindles.
- (2) Release two screws accessible through two holes in the rear of the cabinet back.
- (3) Remove two screws from underneath the cabinet back and withdraw it.
- (4) The chassis is held in the cabinet front by two screws situated under it. Removal of these enables the chassis to be withdrawn.

### Tuning Drive Cord Replacement:

The accompanying diagram shows the route of the cord and the method of attachment.

**RED DOT INDICATES COMMON  
CONNECTION FOR ALL VOLTAGES**

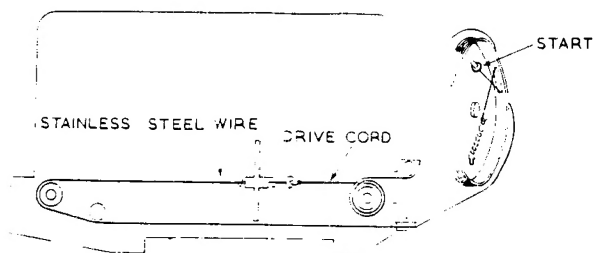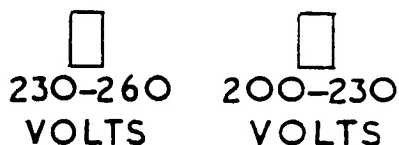

# ALIGNMENT PROCEDURE

## Manufacturer's Setting of Adjustments.

The receiver is tested by the manufacturer with precision instruments and all adjusting screws are sealed. Re-alignment should be necessary only when components in tuned circuits have been repaired or replaced, or when it is found that the seals over the adjusting screws have been broken.

It is especially important that the adjustments should not be altered unless in association with the correct testing instruments listed below.

Under no circumstances should the plates of the ganged tuning capacitor be bent, as the unit is accurately aligned during manufacture and cannot be re-adjusted unless by skilled operators using special equipment.

For all alignment operations, connect the "low" side of the signal generator to the receiver chassis and keep the

generator output as low as possible to avoid A.V.C. action. Also, keep the volume control in the maximum clockwise position.

## Testing Instruments.

(1) A.W.A. Junior Signal Generator, type 2R7003, or

(2) A.W.A. Modulated Oscillator, series J6726.

If the modulated oscillator is used, connect a 0.25 megohm non-inductive resistor across the output terminals, and, for short wave alignment, an additional 400 ohms non-inductive resistor in series with the "high" output lead of the instrument.

(3) A.W.A. Output Meter, type 2M8832.

## ALIGNMENT TABLE

Alignment Order	Connect "High" side of Generator to:	Tune Generator to:	Tune Receiver Dial to:	Adjust for Maximum Peak Output:
1	Aerial Section of Gang (Centre Section)	455 Kc/s.	540 Kc/s.	L15 Core
2	Aerial Section of Gang (Centre Section)	455 Kc/s.	540 Kc/s.	L14 Core
3	Aerial Section of Gang (Centre Section)	455 Kc/s.	540 Kc/s.	L13 Core
4	Aerial Section of Gang (Centre Section)	455 Kc/s.	540 Kc/s.	L12 Core
5	Aerial Section of Gang (Centre Section)	455 Kc/s.	540 Kc/s.	L11 Core
6	Aerial Section of Gang (Centre Section)	455 Kc/s.	540 Kc/s.	L10 Core
Repeat the above adjustments until the maximum output is obtained.				
7	Aerial Lead	600 Kc/s.	500 Kc/s.	L.F. Osc. Core Adj. (L6)*
8	Aerial Lead	1500 Kc/s.	500 Kc/s.	H.F. Osc. Adj. (C10)
9	Aerial Lead	1500 Kc/s.	500 Kc/s.	H.F. Aer. Adj. (C4)
10	Aerial Lead	1500 Kc/s.	500 Kc/s.	H.F. Aer. Adj. (C2)
Repeat adjustments 7, 8, 9, and 10.				
11	Aerial Lead	16 Mc/s.	15 Mc/s.	H.F. Osc. Adj. (C15)‡
12	Aerial Lead	16 Mc/s.	15 Mc/s.	H.F. Aer. Adj. (C6)‡


\* Rock the tuning control back and forth through the signal.

† Use minimum capacity peak if two can be obtained. Check to determine that the trimmer has been adjusted to correct peak by tuning the receiver to approximately 15.09 Mc/s. where a weaker signal should be received.

‡ Use maximum capacity peak if two can be obtained.

# CIRCUIT CODE—RADIOLA 566-MA

Code No.	Description	Part No.	Fig. No.	Location
<b>INDUCTORS</b>				
L1, L2	Aerial Coil 540-1600 Kc/s	30768	2	D15
L3, L4	Aerial Coil 6-18 Mc/s	15456	1	J15
L5	Aerial Coil 540-1600 Kc/s	33598	2	C15
L6, L7	Oscillator Coil 540-1600 Kc/s	7638A	2	G12
L8, L9	Oscillator Coil 6-18 Mc/s	15458	2	D10
L10, L11	1st I.F. Transformer	33594	1	H5
L12, L13	2nd I.F. Transformer	33594	1	H8
L14, L15	3rd I.F. Transformer	33596	1	H11
<b>RESISTORS</b>				
R1	1,000 ohms		2	G15
R2	470 ohms		2	H14
R3	47,000 ohms		2	J13
R4	22,000 ohms		2	H13
R5	220 ohms		2	G13
R6	0.1 megohm		2	D12
R7	39,000 ohms		2	D9
R8	2,200 ohms		2	F8
R9	0.1 megohm		2	H12
R10	1,500 ohms		2	I11
R11	10,000 ohms		2	I9
R12	2,200 ohms		2	I9
R13	15,000 ohms		2	G9
R14	0.1 megohm		2	I9
R15	6,000 ohms		2	F10
R16	390 ohms		2	F8
R17	220 ohms		2	I8
R18	22,000 ohms		2	G7
R19	10 megohms		2	F8
R20	2,200 ohms		2	H7
R21	1.8 megohms		2	H5
R22	47,000 ohms		2	H7
R23	0.5 megohm		2	C2
R24	33,000 ohms	32815	2	D1
R25	5,000 ohms		2	J4
R26	150 ohms		2	G4
R27	47,000 ohms		2	J6
R28	1 megohm Tone Control (incl. S2)	32815	2	D2
<b>CAPACITORS</b>				
C1	6.8 $\mu$ F ceramic		2	D15
C2	4-27 $\mu$ F trimmer	33304	2	D18
C3	12-445 $\mu$ F tuning	18631	1	F3
C4	4-27 $\mu$ F trimmer	33304	2	D11
C5	0.05 $\mu$ F paper 200V working		2	D12
C6	2-20 $\mu$ F air trimmer	19659	2	J15
C7	0.05 $\mu$ F paper 200V working		2	H16
<b>TRANSFORMERS</b>				
T1	Loudspeaker Transformer	XA2	1	D11
T2	Power Transformer 50-60 C.P.S. 40 C.P.S.	25807G	1	F15
<b>TRANSFORMERS</b>				
S1	LOUDSPEAKER			
S2	7" x 5" Permanent Magnet SWITCHES	20920	1	C11
	Range Switch	34167	2	F14
	Power Tone Switch (on R28)		2	C2
<b>DESCRIPTION</b>				
C8	10 $\mu$ F mica			
C9	12-445 $\mu$ F tuning	18631	2	G14
C10	8-40 $\mu$ F trimmer		1	F4
C11	0.025 $\mu$ F paper 400V working		2	F13
C12	0.025 $\mu$ F paper 400V working		2	G15
C13	0.025 $\mu$ F paper 400V working		2	G14
C14	470 $\mu$ F padder $\pm 2\frac{1}{2}\%$		2	F12
C15	12-445 $\mu$ F tuning	18631	1	F6
C16	2-20 $\mu$ F air trimmer	19659	2	F10
C17	4,000 $\mu$ F padder $\pm 2\frac{1}{2}\%$		2	D8
C18	0.025 $\mu$ F paper 400V working		2	C9
C19	47 $\mu$ F mica		2	H13
C20	0.025 $\mu$ F paper 400V working		2	K13
C21	150 $\mu$ F silvered mica (in 1st I.F.)		1	H5
C22	150 $\mu$ F silvered mica (in 1st I.F.)		1	H5
C23	0.025 $\mu$ F paper 400V working		2	G11
C24	8 $\mu$ F 525 P.V. electrolytic		2	G8
C25	0.025 $\mu$ F paper 400V working		2	H11
C26	0.025 $\mu$ F paper 400V working		2	G11
C27	150 $\mu$ F silvered mica (in 2nd I.F.)		1	H8
C28	150 $\mu$ F silvered mica (in 2nd I.F.)		1	H8
C29	0.025 $\mu$ F paper 400V working		2	K10
C30	0.025 $\mu$ F paper 400V working		2	G10
C31	0.025 $\mu$ F paper 400V working		2	F8
C32	24 $\mu$ F 350 P.V. electrolytic		1	E9
C33	0.025 $\mu$ F paper 400V working		2	F6
C34	0.025 $\mu$ F paper 400V working		2	F8
C35	220 $\mu$ F silvered mica (in 3rd I.F.)		1	H11
C36	220 $\mu$ F silvered mica (in 3rd I.F.)		1	H11
C37	100 $\mu$ F ceramic		2	H6
C38	0.025 $\mu$ F paper 400V working		2	K8
C39	0.025 $\mu$ F paper 400V working		2	G1
C40	0.05 $\mu$ F paper 200V working		2	F6
C41	0.0025 $\mu$ F paper 600V working		2	H6
C42	100 $\mu$ F ceramic		2	H6
C43	25 $\mu$ F 40 P.V. electrolytic		2	G4
C44	0.01 $\mu$ F paper 600V working		2	D5
	24 $\mu$ F 350 P.V. electrolytic		2	E13

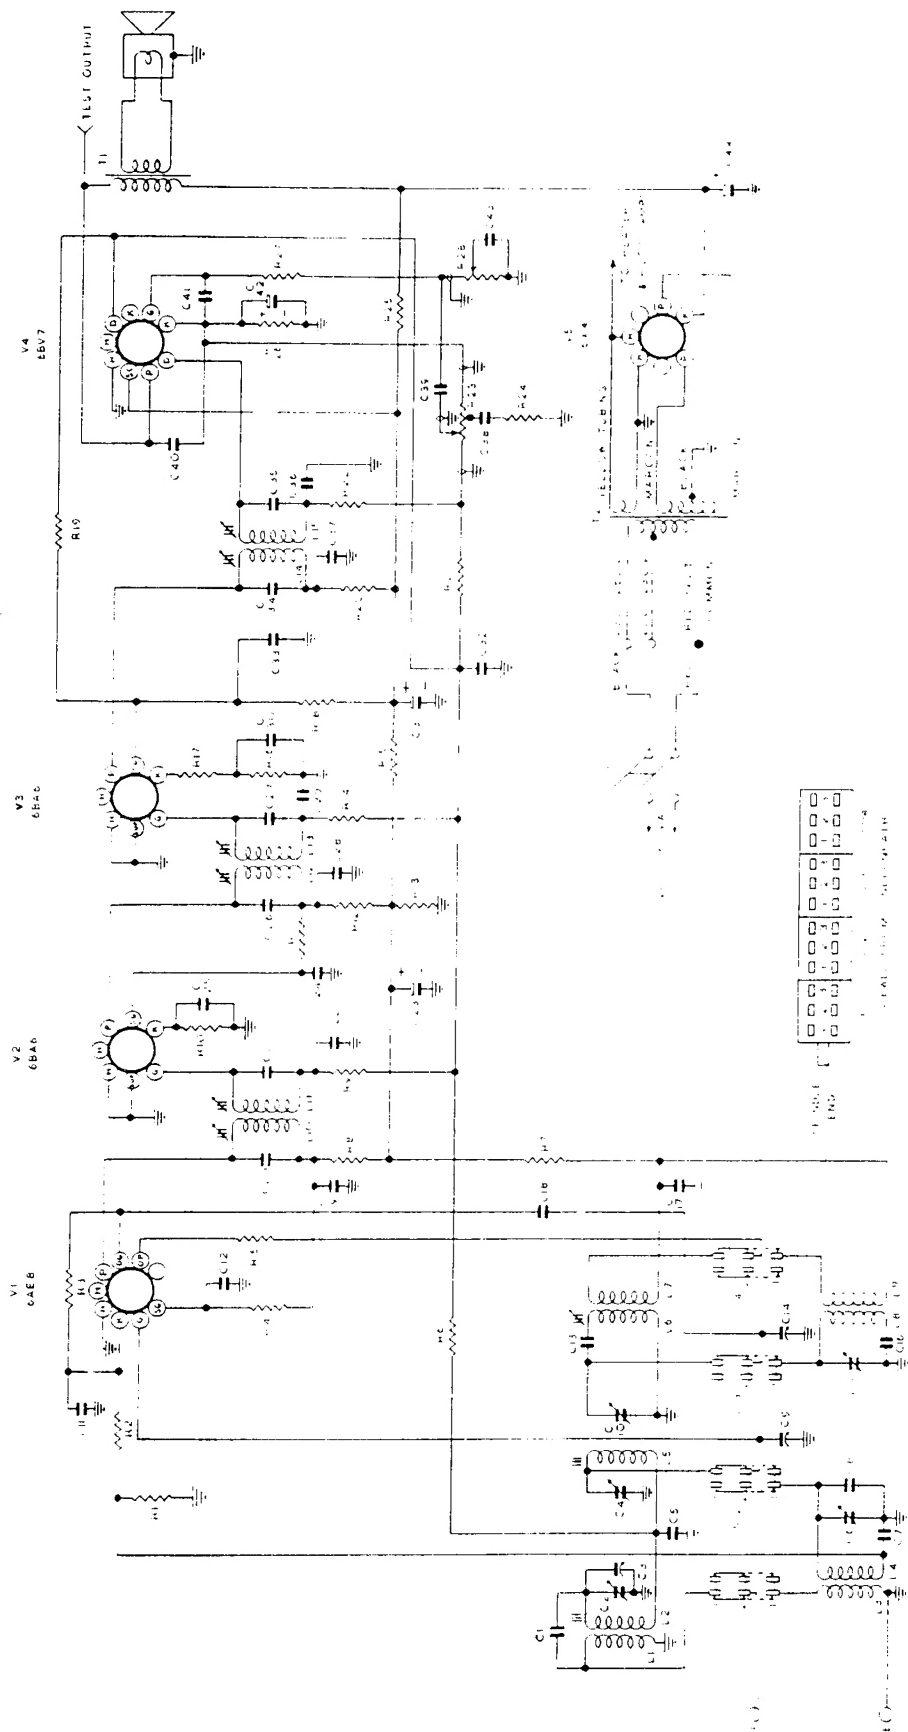

## D.C. RESISTANCE OF WINDINGS

Winding	D.C. Resistance in ohms
Aerial Coil (M.W.)	
Primary (L1)	13
Secondary (L2)	1.5
Aerial Coil (M.W.) L5	1.5
Aerial Coil (S.W.)	
Primary (L3)	4
Secondary (L4)	*
Oscillator Coil (M.W.)	
Primary (L6)	2
Secondary (L7)	6
Oscillator Coil (S.W.)	
Primary (L8)	*
Secondary (L9)	*
1st and 2nd I.F. Transformer Windings	14
3rd I.F. Transformer Windings	13
Power Transformer T2	
Primary	50
Secondary	350
Loudspeaker Input Transformer T1	
Primary	450
Secondary	*

\* Less than 1 ohm

The above readings were taken on a standard chassis, but substitution of materials during manufacture may cause variations and it should not be assumed that a component is faulty if a slightly different reading is obtained.

## SOCKET VOLTAGES

VALVES		Cathode to Chassis Volts	Screen Grid to Chassis Volts	Anode to Chassis Volts	Anode Current mA	Heater Volts
6AE8	Converter	40	50	76	1.4	5.3
6BA6	I.F. Amp.	40	62	72	2.0	5.3
6BA6	I.F. Amp.	40	95	138	5.3	5.3
6BV7	A.F. Amp., Det., A.V.C. Output	40	150	240	17	5.3
6X4	Rectifier	40		240-240 A.C. R.M.S.		5.3

Total H.T. Current = 42mA.

Measured at 240 volts A.C. supply, no signal input, Volume Control maximum clockwise.

Voltmeter 20,000 ohms per volt; measurements taken on highest scale giving accurate readable deflection.


# MECHANICAL REPLACEMENT PARTS

ITEM	PART No.	ITEM	PART No.
Bearing Post (Pulley No. 31365)	31366	Nut (Retaining Volume Control)	5926
Bracket (Tuning Capacitor)	33377	Pointer Assembly	34153
Bracket (Tuning Spindle and Volume Control)	33378	Power Cable	15940
Cabinet Back (Including moulded brackets)	34352	Pulley, Drive Cord (3 Small)	31365
Cabinet Front (Including Fret Medallion, Name-plate and Retainers)	34350	Pulley (Volume Control Spindle)	34148
Clip (Retaining I.F.'s)	27780	Screw Cabinet Mounting	33391
Clip (Retaining Loudspeaker)	33379	Spacer Gang Mounting	33398
Cover (Power Transformer)	20150	Spacer, Wood Loudspeaker	33362
Dial Scale	32234B	Spindle Assembly Drive	34159
Dial Scale Assembly	34570B	Spring (Drive)	1741
Drive Cord	32812/2	Strap (Mounting Chassis in Cabinet)	33376
Drive Drum Assembly	31381	Strap (2) Underneath Cabinet	34556
Fret Cloth (Mattis)	33395	Terminal Panel Assembly 2 way	32822
Fret Cloth (Plastic)	34525	Terminal Panel Assembly 2 way	32826
Grommet (Gang)	33389	Terminal Panel Assembly 3 way	32821
Grommet (Power Cable)	32813	Terminal Panel Assembly 7 way	32828
Knob (Volume and Tuning) Large	34138	Valve Socket Assembly 7 pin Code No.	794576
Knob (Tone and Range) (Small)	34137	Valve Socket Assembly 9 pin Code No.	793037
Light Shield (Ivory Cabinets only)	34537	Volume Control Cable	33579
		Washer Gang Mounting	15735

When ordering, always quote the above part numbers or code numbers and, in the case of coloured parts, such as cabinets, knobs, etc., the colour plus the part number.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17

A B C D E F G H J K

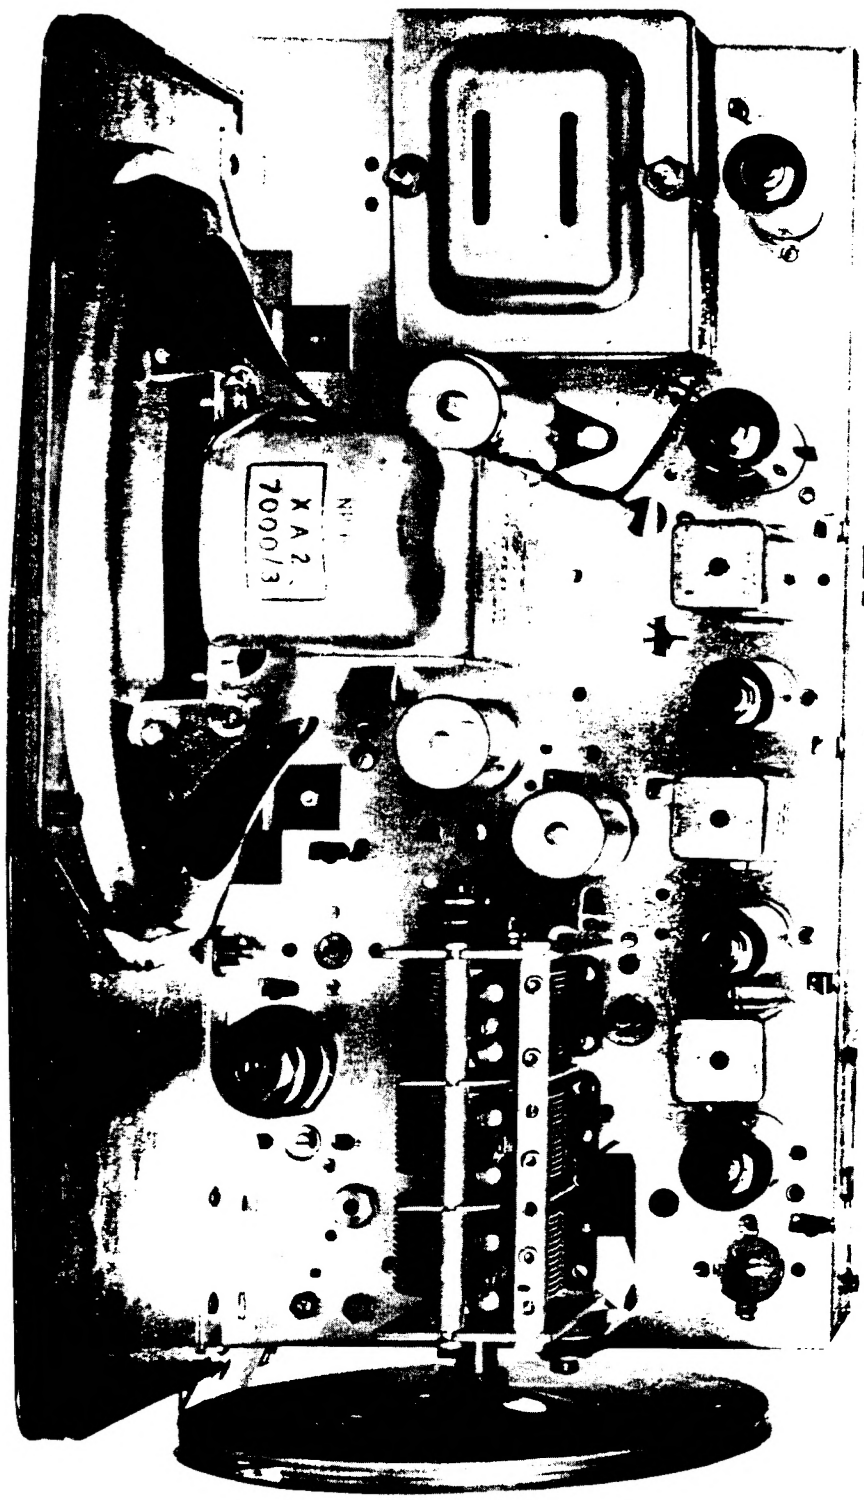


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17

FIG. 1

A B C D E F G H J K

A B C D E F G H J K

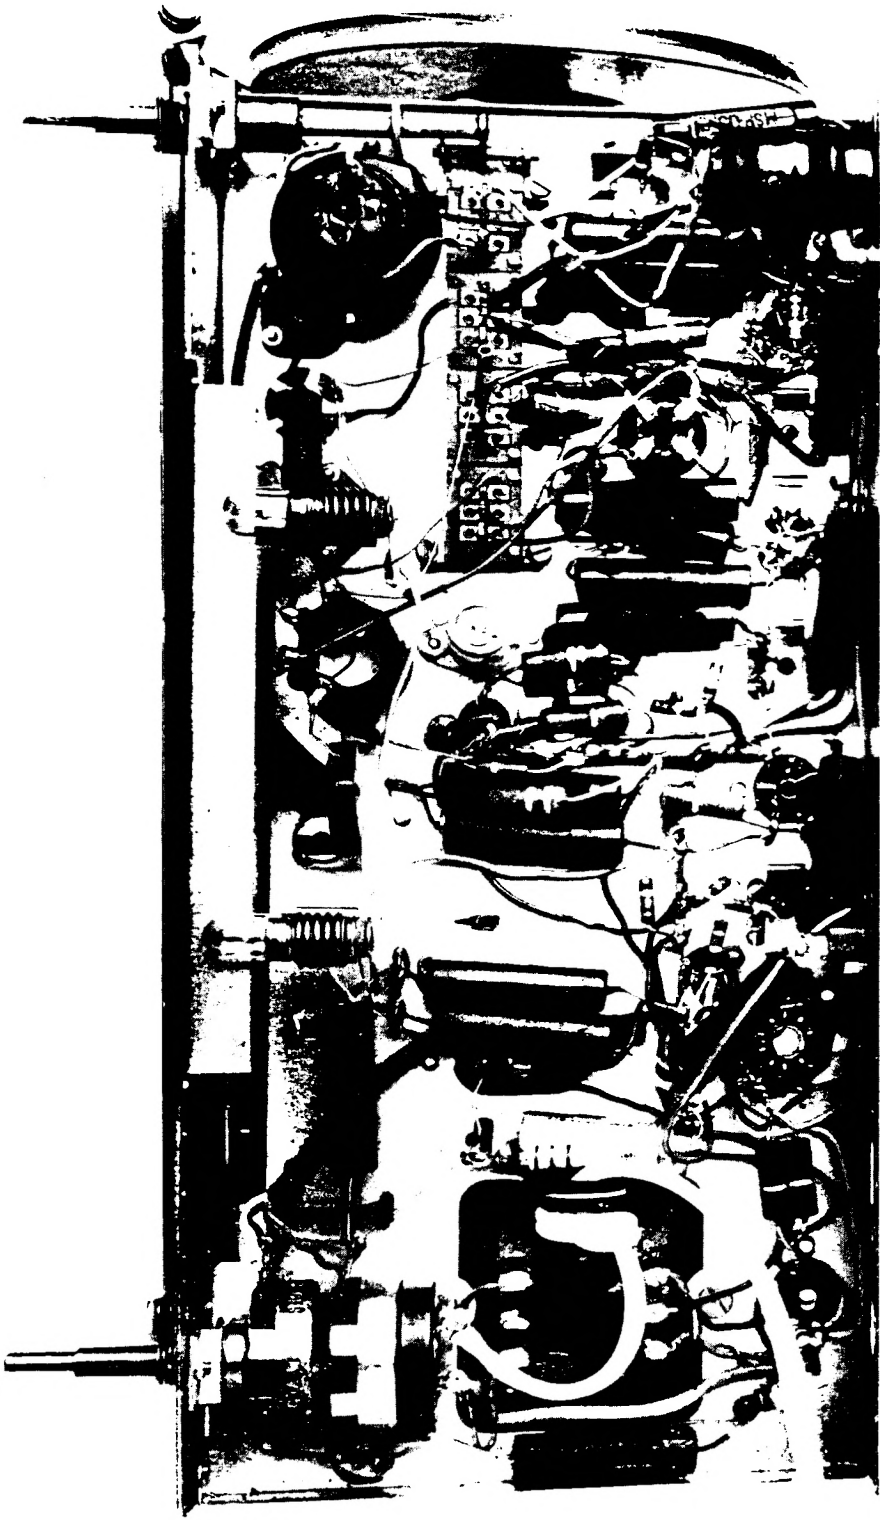

A B C D E F G H J K

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17

FIG. 2